


# USAGE INSTRUCTIONS

**CONDOfix**<sup>®</sup>


**CONDOM WRAP**

MODEL :STANDART


REF. NO : CF 8001

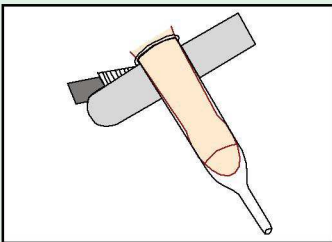


*Place the band under the condom*

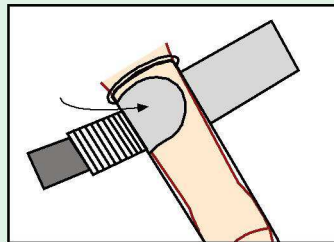


*Wrap the oval tip around the penis*

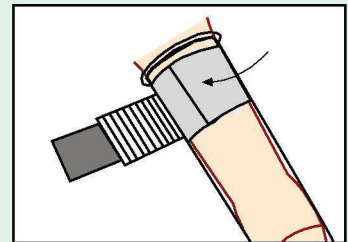

*Put the straight end onto the oval tip*

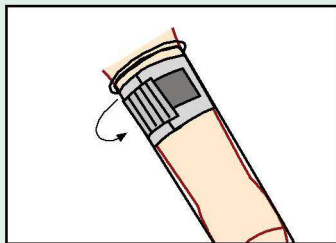

*Stretching the elastic strap close the velcro. Do not overtighten*

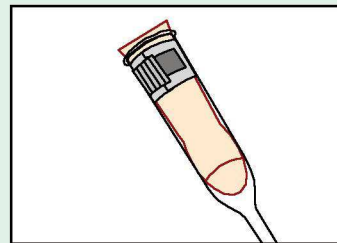

*Pay attention for not to hinder the blood circulation*



▷ Non sterile



▷ Latex Free